

Instant Pot®

CLASSIC MINI 3.8L MULTI-COOKER



Getting Started Guide

- 1 Welcome
- 2 What's in the Box
- 3 Using your Instant Pot
- 4 Initial Setup
- 6 Functions
- 7 Warranty
- 9 Important Safeguards

Welcome to your new Instant Pot!

This Instant Pot Multi-Cooker can help you cook healthy, delicious meals more easily and in less time. We hope you fall in love with Instant Pot cooking and enjoy it in your kitchen for years to come!



Get started with your new Instant Pot!

To make your cooking experience with Instant as easy as possible, we have created simple steps with how to videos to guide you.

www.instantpot.co.uk/get-started



Download the full User Manual

For more detailed instructions and information, scan the QR code to download the full User Manual.

instantpot.co.uk/product-manuals



Need Inspiration?

 
Download the Instant Connect™ app to access 3000+ recipe ideas.

Product specifications


Models	Volume	Wattage	Power	Working Pressure
RIPC41-BK (Black Pepper)	3.8 Litres	800 Watts	220-240V ~ 50/60Hz	80 kPa
RIPC41-WM (Daydream)				
RIPC41-ST (Sea Salt)				

WHAT'S IN THE BOX


Lid

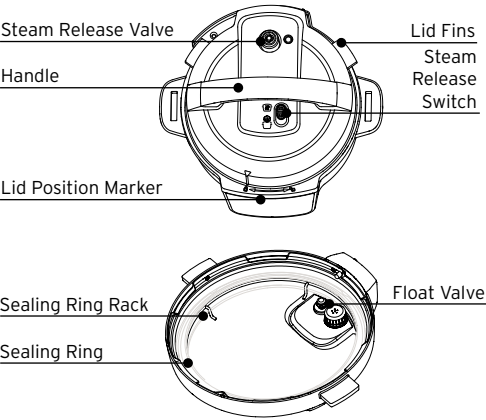


Cooker Base

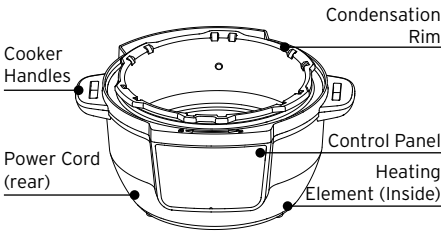 

Stainless Steel Cooking Pot

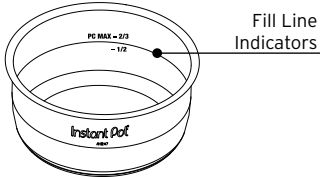 

Parts + Accessories

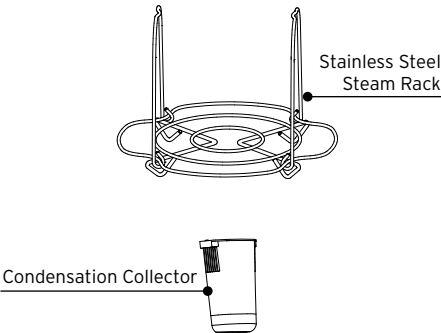 

Illustrations are for reference only and may differ from the actual product.

 
Remember to recycle! We designed this packaging with sustainability in mind.

Please recycle everything that can be recycled where you live.

USING YOUR INSTANT POT

Control panel

We've designed the Instant Pot control panel to be simple to use and easy to read.

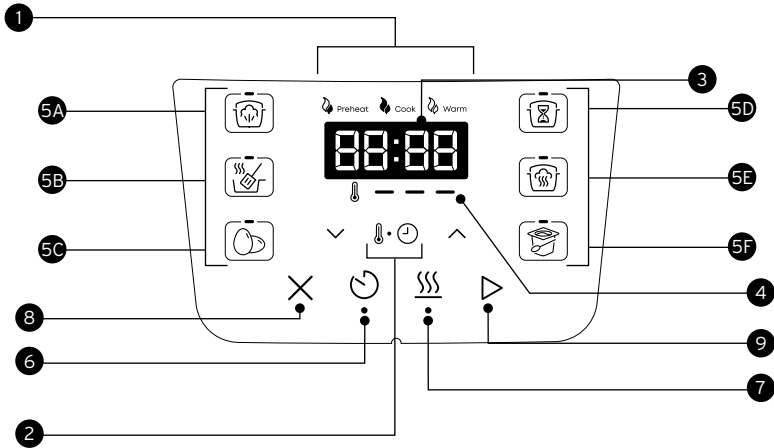

1. Guided Cooking Indicator

- Cooking stages are active when lit

2. Temperature / Time Controls

3. Status Display

- Temperature
- Cooking time
- Delay Start time
- Keep Warm time
- Status messages

4. Temperature Level Lights

5. Smart Program Buttons

- Light shows the active Smart Program

5A. Pressure Cook

5B. Saute

5C. Egg

5D. Slow Cook

5E. Steam

5F. Yoghurt

6. Delay Start

- Light shows ON

7. Keep Warm

- Light shows ON

8. Cancel

9. Start

INITIAL SETUP

Clean before use

1. Wash the inner cooking pot with hot water and dish soap. Rinse and use a soft cloth to dry the outside. You can also wash the inner cooking pot in the dishwasher.
2. Wipe the heating element inside the cooker base with a soft cloth to ensure there are no stray packaging particles.

Set up the Condensation Collector

The condensation collector sits at the back of the cooker base and accumulates overflow moisture from the condensation rim. It should be installed before cooking, then emptied and rinsed out after each use.

To install the condensation collector, align the grooves on the condensation collector with the tabs on the back of the cooker base and slide the condensation collector into place.

Check the Sealing Ring

When the pressure cooking lid is closed, the sealing ring installed on the underside of the lid creates an air-tight seal between the lid and the cooker base.

- The sealing ring comes pre-installed on the multi-cooker lid, but you should check that it's securely installed before each time you cook.
- You should clean the sealing ring after each use.
- Sealing rings stretch over time with normal use. To keep your product safe, replace the sealing ring every 12 to 18 months. Replace sooner if you notice stretching, deformation, or damage.

Familiarise yourself with the Icons

Pressure Cook	Saute	Slow Cook	Steam	Egg	Yoghurt	Delayed Start	Keep Warm
							

PERFORMING A TEST RUN

Setting up your new Instant Pot for a test run is a great way to familiarise yourself with how the unit works before you cook a meal.

To Perform A Test Run

1. Place the inner cooking pot into the cooker base.
2. Add 750ml water to the cooking pot (750ml is the minimum liquid level required to pressure cook)
3. Place the lid on top of the cooking pot and ensure it is in the locked position.
4. Select the pressure cooking function  and set the time to 5 minutes using the up and down arrows.
5. Keep Warm  setting is ON by default. Press Keep Warm  again to turn it off.
6. Press Start . The Preheat status light is ON, the display shows On and the Instant Pot is building pressure.
7. When the pressure is ready, your Instant Pot starts cooking and the cooking timer starts counting down. When the timer reaches 00:00, cooking stops.
You can press Cancel  to stop a Smart Program at any time
8. Once cooking has ended, perform a QPR (Quick Pressure Release) by setting the steam release switch to the Vent position. The float valve drops into lid when all steam is released.
9. After steam release, turn lid anticlockwise and remove the lid.
10. Discard any remaining water, then wash and dry the inner cooking pot.

Now you're ready to cook a meal in your Instant Pot!

WARNING

Pressure Cooking Caution

This appliance uses pressure to cook. Allow the appliance to release all excess pressure and steam before opening the lid. Opening the lid before pressure is released may result in burns, personal injury and/or property damage. Read more in the 'Important Safeguards' section.



Download the full User Manual

For more detailed information and instructions on using your Instant Pot, please read the full User Manual.

instantpot.co.uk/product-manuals

FUNCTIONS



PRESSURE COOK

Two of the Smart Programs use pressure to cook food: Pressure Cook and Egg.

Smart Program	Default Cook Time	Min Cook Time	Max Cook Time
Pressure Cook	10 minutes (00:10)	0 minutes (00:00)	4 hours (04:00)
Egg	5 minutes (00:05)	0 minutes (00:00)	1 hours (01:00)



STEAM

Use Steam as you would a regular stovetop steamer, boiling liquid to cook food with hot steam. Steam does not use pressure to cook.

Smart Program	Default Cook Time	Min Cook Time	Max Cook Time
Steam	10 minutes (00:10)	0 minutes (00:00)	1 hours (01:00)



SAUTÉ

Use Sauté in place of a frying pan or saucepan. Sautéing can deepen the flavours of your food, or can simmer, thicken or reduce sauces.

Setting	Default	Low	Med	High
Temperature	High (190°C)	104°C	149°C	190°C



SLOW COOK

This program does not use pressure to cook food so you'll want to set the steam release to Vent. Choose from these settings in the Slow Cook Smart Program:

Default Cook Time	Min Cook Time	Max Cook Time	Default Temp	Temp Options
6 hours (06:00)	30 minutes (00:30)	24 hours (24:00)	High	Low High

REHEAT AND KEEP WARM

The Keep Warm setting turns on automatically after cooking on all Smart Programs except Sauté.

Default Cook Time	Min Cook Time	Max Cook Time	Default Temp	Temp Options
10 hours (10:00)	10 minutes (00:10)	10 hours (10:00)	High	Low Med High



YOGHURT

Easily make delicious, fermented dairy and non-dairy yoghurt.

Process	Default cook time	Default temp	Custom
Pasteurise	3 minutes (00:03)	High	N/A
Ferment (dairy)	8 hours (08:00)	Low	N/A
Ferment (non-dairy, custom)	Adjustable	Adjustable	Min 30 minutes (00:30). Max 99 hours, 30 minutes (99:30)



DELAY START

You can set a Delay Start timer for a minimum of 10 minutes or a maximum of 24 hours, in 10-minute increments (the default is 6 hours).

Delay Start is not available with the Sauté, Yoghurt and Keep Warm Smart Program.

WARRANTY

Proof of original purchase date and, if requested, return of your appliance is required to obtain service under this Limited Warranty. Provided that this appliance is operated and maintained in accordance with the written instructions included with the appliance (which are also available at instantpot.co.uk), the Company will, at its sole discretion, either: (i) repair defects in materials and workmanship; or (ii) replace the appliance. In the event the appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase (UK only).

The Company is not responsible for shipping costs for warranty service.

Limitation and Exclusions

Any modification or attempted modification to your appliance may interfere with the safe operation of the appliance and may result in serious injury and damage. Any modification or attempted modification to your appliance or any part thereof will void the warranty, unless such modification(s) or alteration(s) were expressly authorised by the Company.

This warranty does not cover (1) normal wear and tear; (2) damage resulting from negligent, unreasonable or misuse of the appliance, improper assembly or disassembly, use contrary to the operating instructions, failure to provide reasonable and necessary maintenance, Acts of God (such as fire, flood, hurricanes and tornadoes), or repair or alteration by anyone, unless expressly directed and authorised by the Company; and (3) repairs where your appliance is used for other than normal household use and in a manner contrary to published user or operator instructions.

To the extent permitted by applicable law, the liability of the Company, if any, for any allegedly defective appliance or part shall be limited to repair or replacement of the appliance or part thereof, and shall not exceed the purchase price of a comparable replacement appliance.

Except as expressly provided herein and to the extent permitted by law, (1) the Company makes no warranties, conditions or representations, express or implied, usage, custom of trade or otherwise with respect to the appliance or parts covered by this warranty and (2) the Company shall not be responsible or liable for indirect, incidental or consequential damages arising out of or in connection with the use or performance of the appliance or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of any nature or kind.

You may have rights and remedies under applicable laws, which are in addition to any right or remedy which may be available under this limited warranty

WARRANTY

Please visit instantpot.co.uk/product-registration/ to register your appliance. You will be asked to provide your name, your email address, the store name, date of purchase, model number and serial number (both of which are found on the appliance). This registration will enable us to keep you up-to-date with product developments and recipes, and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understood the instructions for use and warnings accompanying the appliance.

Warranty Service

To obtain warranty service, please contact our Customer Care Department by creating a support ticket online at instantpot.co.uk/contact-us. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Instant Brands is not responsible for shipping costs related to warranty service. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.

Within the UK

Instant Brands (EMEA) Limited, Floor 6,
Block C, Dukes Court, Duke Street,
Woking, GU21 5BH
Email: UKSupport@instantpot.com
Telephone: +44 (0) 3331 230051

Within the EU

Instant Brands (Ireland) Limited, Block A,
George's Quay Plaza, George's Quay
Dublin, D02 E440, Republic of Ireland
Email: EUSupport@instantpot.com
Telephone: +44 (0) 3331 230051

This warranty was last updated on 1 September 2019 for all products sold from [1 November 2019]. If your product comes with our older warranty version, your warranty will continue to be honoured.

Recycling

This appliance complies with the WEEE Directive 2012/19/EU on the disposal of electrical and electronic equipment (WEEE). This appliance complies with the European directive for electromagnetic compatibility (EMC) 2014/30/EU and its revisions, as well as Low Voltage Directive (LVD) 2014/35/EU and its revisions. This marking indicates that this product should not be disposed of with other household waste throughout the UK and EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable re-use of material sources. To return your used device, please use the return and collection systems or contact Customer Care for further recycling and WEEE information.





IMPORTANT SAFEGUARDS

Failure to follow safety instructions may result in personal injury and/or property damage and may void your warranty.

READ ALL INSTRUCTIONS

Before using your new appliance, please read all instructions, including the Safety Information below. Keep this manual for reference.

Placement

DO place the appliance on a countertop only. Always operate the appliance on a stable, non-combustible, level surface.

DO make sure all parts are dry and free of food debris before placing the inner cooking pot on the cooker base.

DO NOT place the appliance or power cord on or close to a gas or electric stovetop or oven. NEVER use the appliance on your stove.

DO NOT use the appliance near water, an external heat source or flame.

DO NOT use outdoors. Keep out of direct sunlight.

DO NOT place on anything that may block the vents on the appliance.

General Use

The removable inner cooking pot is extremely hot during use and can be extremely heavy when full of ingredients.

DO use oven mitts when handling the inner cooking pot and removing accessories.

DO place hot accessories on a heat-resistant surface or cooking plate.

DO use care when lifting the cooking pot from the cooker base to avoid burn injury.

DO use extreme caution when the cooking pot contains hot food, hot oil or other hot liquids.

DO use only the Instant Pot lid that came with this cooker base. Using any other pressure cooker lids may cause personal injury and/ or property damage.

DO NOT use the appliance without the removable inner cooking pot installed.

DO NOT touch the appliance's hot surfaces, or any accessories during or immediately after cooking because they will be hot. Only use the appliance's side handles for carrying or moving.

DO NOT use this appliance for deep frying or pressure frying with oil.

DO NOT move the appliance while it is in use and use extreme caution when disposing of hot grease.

⚠ WARNING

DO NOT allow children under 8 years old or persons with reduced physical, sensory or mental capabilities to operate this appliance. Close supervision is necessary when any appliance is used by or near children and persons with reduced physical, sensory or mental capabilities. Children should not play with this appliance.

DO NOT use the appliance for anything other than household use. It is not intended for commercial use.

DO NOT leave the appliance unattended while in use.

Pressure Cooking

This appliance cooks under pressure. Allow the appliance to depressurise naturally or release all excess pressure before opening. Failure to follow these instructions may result in burns, personal injury and/or property damage.

DO make sure the appliance is properly closed before operating.

DO check that the steam release valve is installed properly.

DO use the pressure cooking lid when pressure cooking.

DO turn the appliance off if steam escapes from the steam release valve and/or float valve in a steady stream for longer than 3 minutes. If steam escapes from the sides of the lid, turn the appliance off. Once steam stops, pressure is released and the cooker has cooled, carefully make sure the sealing ring is properly installed.

DO ensure the sealing ring is in good condition and installed properly.

DO check the steam release valve, steam release pipe, anti-block shield and float valve for clogging before use.

DO NOT remove the pressure cooking lid with unprotected hands.

DO NOT attempt to force the lid off the Instant Pot cooker base.

DO NOT move the appliance when it is pressurised.

DO NOT cover or obstruct the steam release valve and/or float valve with cloth or other objects.

DO NOT attempt to open the appliance until it has depressurised, and all internal pressure has been released. Attempting to open the appliance while it is still pressurised may lead to sudden release of hot contents and may cause burns, personal injury and/or property damage.

DO NOT place your face, hands or exposed skin over the steam release valve or float valve when the appliance is in operation or has residual pressure, and do not lean over the appliance when removing the lid.

Overfill During Pressure Cooking

Overfilling may cause a risk of clogging the steam release pipe and valve, developing excess pressure.

DO NOT fill the inner cooking pot over the line labeled 'PC MAX' or 'Max PC Fill'.

⚠ WARNING

DO NOT fill the inner cooking pot over the line labeled '1/2' when cooking foods that expand during cooking such as rice, dried beans or dried vegetables.

DO be aware that certain foods, such as apple sauce, cranberries, pearl barley, oatmeal or other cereals, split peas, noodles, macaroni, rhubarb, or spaghetti can foam, froth and sputter, and clog the steam release pipe and valve.

DO NOT place oversized foods into the inner cooking pot as they may cause risk of fire, personal injury and/or property damage.

Accessories

DO use only accessories or attachments authorised by Instant Brands. The use of parts, accessories or attachments not recommended by the manufacturer may cause a risk of electric shock or other personal injury, fire and/or property damage.

DO use only an authorised Instant Pot inner cooking pot to reduce the risk of pressure leakage.

DO only replace the sealing ring with an authorised Instant Pot sealing ring to prevent personal injury, property damage, and/or damage to the appliance.

DO NOT use the included accessories in a microwave, toaster oven, convection or conventional oven, on a ceramic, electric or gas cooktop, or with an outdoor grill.

Care and Storage

DO let the appliance cool to room temperature before cleaning or storage.

DO NOT store any materials, other than the inner cooking pot, in the cooker base when not in use.

DO NOT place any combustible materials in the cooker base, such as paper, cardboard, plastic, styrofoam or wood.

Power Cord

A short power-supply cord is used to reduce the hazards resulting from grabbing, entanglement or tripping.

WARNING: Hot spilled food can cause serious burns.

DO keep appliance and power cord away from children.

DO NOT let the power cord hang over edges of tables or counters.

DO NOT let the power cord touch hot surfaces or open flame, including a stovetop.

DO NOT use below-counter power outlets. This appliance has a 3-prong grounding plug. To reduce the risk of electric shock.

ONLY plug the power cord into a grounded electrical outlet.

DO NOT remove the grounding prong on the electrical plug.

⚠ WARNING

DO NOT use with extension cords, power converters or adapters, timer switches or separate remote-control systems.

If the unit includes a detachable power cord: always attach the power cord to the appliance first, then plug the power cord into the wall outlet.

Electrical Cautions

The cooker base contains electrical components that are an electrical shock hazard. Failure to follow these instructions may result in electric shock and/or death.

To protect against electrical shock:

To disconnect, select Cancel, then remove plug from power source. Always unplug when not in use, as well as before adding or removing parts or accessories, and before cleaning. To unplug, grasp the plug and pull from the outlet. **NEVER** pull from the power cord.

DO regularly inspect the appliance and power cord for any signs of damage or fraying.

DO NOT operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Consumer Care by email at UKSupport@instantpot.com (if located in the UK) or EUSupport@instantpot.com (if located in the EU) or by phone on: +44 (0) 3331 230051.

DO NOT attempt to repair, replace or modify components of the appliance, as this may cause electric shock or other personal injury, fire and/or property damage, and will void the warranty.

DO NOT tamper with any of the safety mechanisms, as this may result in personal injury and/or property damage.

DO NOT tamper with any of the safety mechanisms, as this may result in personal injury and/or property damage.

DO NOT immerse the power cord, plug or the appliance in water or other liquid.

DO NOT clean the appliance by rinsing it under a tap.

DO NOT use the appliance in electrical systems other than 220- 240 V ~ 50/60 Hz.

SAVE THESE INSTRUCTIONS

⚠ WARNING

Failure to follow safety instructions may result in personal injury and/or property damage and may void your warranty.

Get the full User Manual

instantpot.co.uk/product-manuals



Recipes

Download the Instant Connect™ App



Replacement parts and accessories

instantpot.co.uk/instant-accessories-spare-parts

Contact Customer Care

[Instantpot.co.uk/support](https://instantpot.co.uk/support)

UKSupport@instantpot.com

EUSupport@instantpot.com

+44 (0) 3331 230051

Instant Brands (EMEA) Limited

Floor 6, Block C, Dukes Court,
Duke Street, Woking, GU21 5BH
United Kingdom

Instant Brands (Ireland) Limited

Block A, George's Quay Plaza
George's Quay, Dublin, D02 E440
Republic of Ireland

Instant Brands and Instant Pot are registered
trademarks of Instant Pot Brands

© 2025 Instant Pot Brands LLC