

get started

INSTANT™ **MILK FROTHER**

Instant™

Welcome

Welcome to your new Instant Milk Frother!

Make your morning a little more amazing. Be your own barista and create café-quality drinks.

CONTENTS

Important Safeguards	2
Safety Warnings	2
What's in the box?	5
Initial set up	6
Initial cleaning	6
Your Instant Milk Frother	7
Using Your Instant Milk Frother	9
Care, Cleaning, Storing	10
Warranty	11
Learn more	13

IMPORTANT SAFEGUARDS

⚠ WARNING

Read all instructions before using and only use this appliance as directed. Failure to follow these Important Safeguards may result in injury and/or property damage and will void your warranty.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

Placement

- **DO** operate the appliance on a stable, non-combustible, level surface.
- **DO NOT** place the appliance on or near a hot gas or electric burner, or in a heated oven.
- **DO NOT** let the power cord touch hot surfaces or open flame, including the stovetop.
- **DO NOT** connect appliance to an outlet below counter.

General Use

Spilled liquids from this frother can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord. A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.

- **DO NOT** use this frother outdoors.
- **DO NOT** let the frother operate without milk.
- **DO NOT** use the appliance for anything other than its intended use. Not for commercial use.

FOR HOUSEHOLD USE ONLY

- **DO** regularly inspect the appliance and power cord.
- **DO** fill the pitcher with only water, milk or non-dairy milk alternatives. Never fill the pitcher with oil or other liquids.
- **DO NOT** leave the appliance exposed to sun, wind, and/or snow.
- **DO** operate and store the appliance above 0°C.
- **DO NOT** leave the appliance unattended when in use.
- **DO NOT** allow children to operate the appliance; close supervision is required when any appliance is used near children.
- **DO NOT** let children play with this appliance.
- To avoid the risk of personal injury or damage to property, **DO NOT** open the top cover during the foaming, frothing or warming process.

⚠ WARNING

There are extremely hot liquids within the unit during the foaming, frothing and warming process.

- **DO NOT** touch hot surfaces. Use handles or knobs.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

Care and Storage

- **DO** unplug from outlet when not in use before cleaning. Allow the appliance to cool before putting on or taking off parts, and before cleaning the appliance.
- **DO NOT** store any materials in the frother when not in use.

Plug

This appliance has an Earthed plug. To reduce the risk of electric shock:

- **DO NOT** attempt to modify the plug.

⚠ WARNING

Electrical Warning

The unit contains electrical components that are an electrical shock hazard. Failure to follow these instructions may result in electric shock.


To protect against electrical shock:

- **DO NOT** use with power converters or adapters, timer switches or separate remote-control systems.
- **DO** disconnect the appliance by first pressing the Start/Cancel button, and then grasping the plug and pulling from the outlet. Never pull from the power cord.
- **DO** keep appliance and cord away from children.
- To reduce the risk of fire or electric shock, **DO NOT** remove the bottom cover. No user-serviceable parts inside. Repair should be done by authorised service personnel only.
- **DO** regularly inspect the appliance and power cord. **DO NOT** operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Customer Care by email at UKSupport@instantbrands.com (if located in the UK) or EUSupport@instantbrands.com (if located in the EU) or by phone at +44 (0) 33312 30051.
- **DO NOT** attempt to repair, replace or modify components of the appliance, as this may cause electric shock, fire or injury, and will void the warranty.
- **DO NOT** tamper with any of the safety mechanisms, as this may result in injury or property damage.
- To protect against electrical shock **DO NOT** immerse power cord, plug or the appliance in water or other liquid.
- **DO NOT** use the appliance in electrical systems other than 220-240 V ~ 50-60 Hz.
- If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

SAVE THESE INSTRUCTIONS

WHAT'S IN THE BOX?

Instant™ Milk Frother

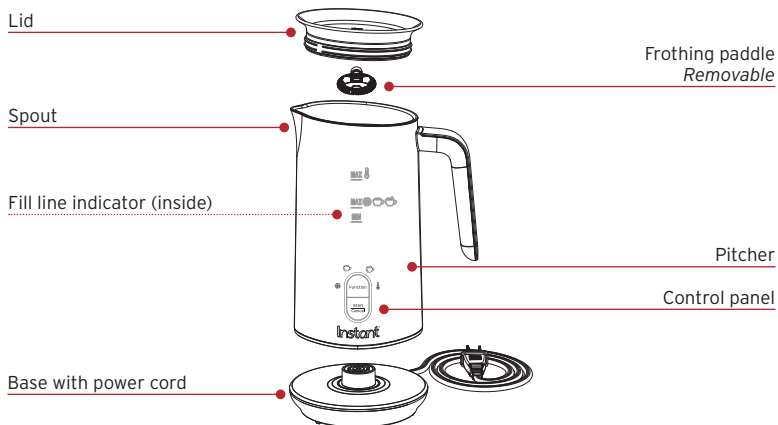

Illustrations are for reference only and may differ from the actual product.

INITIAL SET UP

Before you begin creating your first at-home, café-style drink, follow these initial setup steps.

1. Remove the Instant Milk Frother and all accessories out of the box.
2. Remove all packaging materials from within and around the unit.
3. Plug in the frother base into an earthed outlet.
4. Follow the **Initial cleaning** steps before you begin frothing.

INITIAL CLEANING

It's important to clean the components before you begin frothing.

1. Remove the lid from the pitcher, put it aside.
2. Gently pull up on the frothing paddle at the bottom of the frothing pitcher.
3. Hand wash and rinse the lid and frothing paddle with dish soap and warm water.
4. Without immersing the pitcher in water, wash and rinse the inside of the frothing pitcher with dish soap and warm water.
5. Dry the lid, frothing paddle and pitcher with a soft, dry cloth.
6. Once dry, place the frothing paddle back into the pitcher by positioning the square end of the frothing paddle over the shaft at the bottom of the pitcher, and rotating the paddle until it aligns with the shaft, then push the paddle down until is secure.


Now you're ready to start making froth for your favourite drinks!

YOUR INSTANT MILK FROTHER

Get familiar with your frother's controls and programmes.

Control Panel

The Instant™ Milk Frother has a simple, two button-control panel.

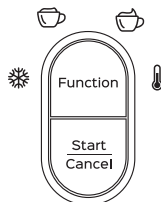

Function

You can toggle between the programmes to create different types of foams, perfect for your drinks.

Start/Cancel

Starts and stops a selected programme.

Cold foam

Create cold, silky microfoam to top your cold brew.



Light, warm foam

This setting heats and froths milk for café au lait and matcha lattes.



Thick, warm foam

You can create thick, rich and warm foam, perfect for topping a cappuccino.



Warming

Heat your drink without creating foam. This setting slowly stirs the frothing paddle to keep your drink from burning. This setting is great for warming milk, creating hot chocolate and more.



USING YOUR INSTANT MILK FROTHER

Non-dairy milk

The Instant Milk Frother allows you to make both light and thick froth, warm or cold, with dairy and dairy-free milks. However, **not all milk alternatives produce foam.**

Use **oat** or **soy milk** when using the **warm** or **cold foam** setting. **Coconut milk** will **only** produce foam with the **cold foam** setting. Keep in mind that frothing dairy-free milks may not produce the same results as dairy milk.

How to froth milk

Always use the freshest, coldest milk or milk alternative possible for best results. When frothing large quantities of milk, allow the frother to rest for **3 minutes** after every **2 frothing cycles**.

1. Ensure the froth paddle is securely in place at the bottom of the pitcher.
2. Remove the lid from the pitcher and pour your choice of milk into the pitcher. **Do not overfill the pitcher as this may cause the milk frother to overflow when using a foam setting.**
3. Place the lid on the pitcher and press down until secure.
4. Place the pitcher onto the base.
5. If the base is not plugged into an outlet, connect the plug into an outlet.
6. Press **Function** to toggle between programmes.
7. Press **Start/Cancel** to begin.
8. To stop the programme at any time, press **Start/Cancel**. Otherwise, the milk frother will stop on its own when the programme ends.

Programmes run for a maximum of 3 minutes.

CARE, CLEANING, STORING

Clean your Instant Milk Frother after every use to ensure the best possible results, and to prevent milk residue from burning onto the inside of the pitcher.

Always unplug the milk frother and let it cool to room temperature before cleaning. **DO NOT** use metal scouring pads, abrasive powders or harsh chemical detergents to clean the milk frother or any of its components. Let all parts dry thoroughly before use or before storage.

Part	Cleaning method and instruction
Lid	<ul style="list-style-type: none">• Remove lid from pitcher before cleaning.• Top-rack dishwasher safe.
Pitcher	<ul style="list-style-type: none">• After use, let frother cool completely. Remove pitcher from the base before cleaning.• With a cloth, hand wash the inside of the pitcher with hot water and dish soap. Then, rinse the inside of the pitcher with clean, warm water.• With a damp cloth, hand wash the outside of the pitcher and wipe dry to prevent streaking. Let pitcher dry completely before placing pitcher back onto base.• DO NOT rinse the pitcher's exterior.• DO NOT store liquids in the pitcher.
Frothing paddle	<ul style="list-style-type: none">• Remove from the pitcher before cleaning. Dishwasher safe.
Base	<ul style="list-style-type: none">• Disconnect the base from outlet before cleaning.• With a damp cloth, wipe visible particles from the base as needed.• Allow to dry thoroughly before replacing the pitcher.
Power cord	<ul style="list-style-type: none">• With a barely damp cloth, wipe visible particles from the power cord as needed.• DO NOT fold the power cord when storing.

WARNING

The pitcher and base contain electrical components. To avoid fire, electric shock or personal injury, **DO NOT** machine wash, rinse or immerse the milk frother base, pitcher, power cord or plug in water or other liquids.

WARRANTY

Instant Brands (EMEA) Limited, Instant Brands (Ireland) Limited, and Instant Brands LLC (collectively the "Company") warrant this appliance to be free from defects in workmanship and material, under normal household use, for a period of one (1) year from the date of original purchase. This Limited Warranty extends only to the original purchaser and use of the appliance in the UK and EU. This warranty does not cover appliance use outside of the UK and EU.

Proof of original purchase date and, if requested, return of your appliance is required to obtain service under this Limited Warranty. Provided that this appliance is operated and maintained in accordance with the written instructions included with the appliance (which are also available at instantbrands.co.uk), the Company will, at its sole discretion, either: (i) repair defects in materials and workmanship; or (ii) replace the appliance. In the event the appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase.

The Company is not responsible for shipping costs for warranty service.

Limitation and Exclusions

Any modification or attempted modification to your appliance may interfere with the safe operation of the appliance and may result in serious injury and damage. Any modification or attempted modification to your appliance or any part thereof will void the warranty, unless such modification(s) or alteration(s) were expressly authorised by the Company.

This warranty does not cover (1) normal wear and tear; (2) damage resulting from negligent, unreasonable or misuse of the appliance, improper assembly or disassembly, use contrary to the operating instructions, failure to provide reasonable and necessary maintenance, Acts of God (such as fire, flood, hurricanes and tornadoes), or repair or alteration by anyone, unless expressly directed and authorised by the Company; and (3) repairs where your appliance is used for other than normal household use and in a manner contrary to published user or operator instructions.

To the extent permitted by applicable law, the liability of the Company, if any, for any allegedly defective appliance or part shall be limited to repair or replacement of the appliance or part thereof, and shall not exceed the purchase price of a comparable replacement appliance. Except as expressly provided herein and to the extent permitted by law, (1) the Company makes no warranties, conditions or representations, express or implied, usage, custom of trade or otherwise with respect to the appliance or parts covered by this warranty and (2) the Company shall not be responsible or liable for indirect, incidental or consequential damages arising out of or in connection with the use or performance of the appliance or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of any nature or kind.

You may have rights and remedies under applicable laws, which are in addition to any right or remedy which may be available under this limited warranty.

Product Registration

Please visit instantbrands.co.uk/product-registration/ to register your appliance. You will be asked to provide your name, your email address, the store name, date of purchase, model number and serial number (both of which are found on the appliance). This registration will enable us to keep you up-to-date with product developments and recipes, and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understood the instructions for use and warnings accompanying the appliance.

Warranty Service

To obtain warranty service, please contact our Customer Care Department by creating a support ticket online at instantbrands.co.uk/support/. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Instant Brands is not responsible for shipping costs related to warranty service. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.

Within the UK

Instant Brands (EMEA) Limited,
1 Christchurch Way, Woking,
Surrey, GU21 6JG, UK.

Email: UKSupport@instantbrands.com

Telephone: +44 (0) 3331 230051

Within the EU

Instant Brands (Ireland) Limited,
Suite 6, Rineanna House, Shannon
Free Zone, Shannon, Co Clare,
Ireland, V14 CA36.

Email: EUSupport@instantbrands.com

Telephone: +44 (0) 3331 230051

This warranty was last updated on 1 September 2019 for all products sold from [1 November 2019]. If your product comes with our older warranty version, your warranty will continue to be honoured.

Recycling

This appliance complies with the WEEE Directive 2012/19/EU on the disposal of electrical and electronic equipment (WEEE). This appliance complies with the European directive for electromagnetic compatibility (EMC) 2014/30/EU and its revisions, as well as Low Voltage Directive (LVD) 2014/35/EU and its revisions. This marking indicates that this product should not be disposed of with other household waste throughout the UK and EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable re-use of material sources. To return your used device, please use the return and collection systems or contact Customer Care for further recycling and WEEE information.



LEARN MORE

There's a whole world of Instant Milk Frother information and help just waiting for you. Here are some of the most helpful resources.

Register your product

instantbrands.co.uk/product-registration

Contact Consumer Care

instantbrands.co.uk/support/
UKSupport@instantbrands.com
EUSupport@instantbrands.com
+44 (0) 3331 230051

Replacement parts and accessories

instantbrands.co.uk/product-category/instant

Connect and Share



Get started online with your new product!



Product specifications

Model	Volume	Wattage	Power	Weight	Dimensions
Instant Milk Frother	296 mL	500 watts	220-240 V ~ 50-60 Hz	0.79 kg	22 H x 12 W x 15.5 D cm

Instant Brands (EMEA) Limited
1 Christchurch Way, Woking,
Surrey, GU21 6JG, UK

Instant Brands (Ireland) Limited
Suite 6, Rineanna House,
Shannon Free Zone, Shannon, Co
Clare, Ireland, V14 CA36

instantbrands.co.uk

© 2022 Instant Brands LLC.
898-0119-01